

NOTES:


1. The exact locations of the air valve assemblies will be determined in the field by the Engineer.
2. Before installing Compression Fittings, remove burr from inside and re-round pipe.
3. Attach small mesh screen with a stainless steel hose clamp over opening.
4. Identify water zone with brass tag on air relief valve.

AIR VALVE ASSEMBLY

DRAWN BY: LDL	SCALE:
CHECKED BY:	N.T.S.
LAST REVISED: 6/06	

SECTION:
WATER

DRAWING NO.: **WA-20**

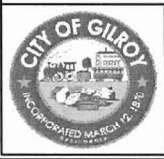

APPROVED BY: *[Signature]*

CITY ENGINEER

DATE: *6/21/06*