

Preventing Pollution: It's Up to Us

In South Santa Clara County, storm drains transport water directly to local creeks and Monterey Bay without treatment. Stormwater pollution is a serious problem for wildlife dependent on our waterways and for the people who live near polluted streams or baylands. Some common sources of this pollution include spilled oil, fuel, and fluids from vehicles and heavy equipment; construction debris; sediment created by erosion; landscaping runoff containing pesticides or weed killers; and materials such as used motor oil, antifreeze, and paint products that people pour or spill into a street or storm drain.

The cities of Gilroy and Morgan Hill have joined together with Santa Clara County and the Santa Clara Valley Water District to educate local residents and businesses to prevent stormwater pollution. Join us by following the practices described in this pamphlet.

Doing the Job Right

General Business Practices

- Schedule excavation and grading work during dry weather.
- Perform major equipment repairs away from the job site.
- When refueling or vehicle/equipment maintenance must be done on site, designate a location away from storm drains.
- Do not use diesel oil to lubricate equipment parts, or clean equipment.
- Prevent sediment from migrating offsite and protect storm drain inlets, drainage courses, and streams, with appropriate BMPs (i.e., gravel rolls, silt fences, temporary swales, etc).
- Properly monitor and maintain all erosion and sediment controls and report failures of erosion and sediment controls to the local stormwater authority.

Storm Drain Pollution from Earth-Moving Activities and Heavy Equipment Operation

Soil excavation and grading operations loosen large amounts of soil that can flow or blow into storm drains when handled improperly. Sediments in runoff can clog storm drains, smother aquatic life, and destroy habitats in creeks and the Monterey Bay.

Poorly maintained vehicles and heavy equipment that leak fuel, oil, antifreeze or other fluids on the construction site are common sources of storm drain pollution.

Site Planning and Preventive Vehicle Maintenance

- Designate a completely contained area of the construction site, well away from streams or storm drain inlets and fitted with appropriate BMPs, for auto and equipment parking, refueling, and routine vehicle and equipment maintenance.
- Maintain all vehicles and heavy equipment. Inspect frequently for and repair leaks.
- Perform major maintenance, repair jobs, and vehicle and equipment washing off site.
- If vehicle or equipment cleaning must be done onsite, clean with water only in a bermed area that will not allow rinse water to run into gutters, streets, storm drains, or surface waters. Do not clean vehicles or equipment onsite using soaps, solvents, degreasers, or steam cleaning equipment, and do not use diesel oil to lubricate equipment or parts onsite.
- If you must drain and replace motor oil, radiator coolant, or other fluids on site, use drip pans or drop cloths to catch drips and spills. Collect all spent fluids, store in separate containers, and recycle whenever possible, or dispose of fluids as hazardous waste.
- Recycle used vehicle batteries.

Practices During Construction

- Remove existing vegetation only when absolutely necessary. Plant *temporary* vegetation for erosion control on slopes or where construction is not immediately planned.
- Use check dams or ditches to divert runoff around excavations. Refer to the CASQA *Construction BMP Online Handbook* (www.casqa.org/resources/bmp-handbooks) for proper erosion and sediment control measures.
- Cover stockpiles and excavated soil with secured tarps or plastic sheeting.
- Keep excavated soil on site and transfer it to dump trucks on site, not in the streets.
- Remove construction equipment from the site as soon as possible.
- Maintain street free of sediment tracking daily.

Spill Cleanup

- Keep spill cleanup materials (e.g., rags, cat litter, and absorbents) available at the construction site at all times. All fueling trucks and fueling areas should have spill kits or other spill protection devices. Clean up spills immediately when they happen.
- Never hose down "dirty" pavement or impermeable surfaces where fluids have spilled. Use dry cleanup methods (absorbent materials, cat litter, or rags) whenever possible and properly dispose of absorbent materials. If you must use water, use just enough to clean the spill without runoff.
- Sweep up spilled dry materials immediately. Never attempt to "wash them away" with water, or bury them. Use as little water as possible for dust control.
- Clean up spills on dirt areas by digging up and properly disposing of contaminated soil.
- Report significant spills to the appropriate local spill response agencies immediately (See back of brochure.) If the spill poses a significant hazard to human health and safety, property or the environment, you must report it to the State Office of Emergency Services.

Small Business Hazardous Waste Disposal Program

Businesses that generate less than 27 gallons or 220 pounds of hazardous waste per month are eligible to use Santa Clara County's Conditionally Exempt Small Quantity Generator Program. Call (800) 207-8222 for a quote, more information or guidance on disposal.

This brochure is one in a series of pamphlets describing storm drain pollution prevention measures for specific types of construction industry activities. Other pamphlets include:

General Construction and Site Supervision

Landscaping and Gardening

Fresh Concrete and Mortar Application

Painting and Application of Solvents and Adhesives

Roadwork and Paving

Dewatering Activities

Home Repair and Remodeling

For additional brochures, visit the City of Gilroy website at: <http://www.cityofgilroy.org/261/Storm-Water-Management>, or call City Hall at (408)-846-0400 for more information.

The City of Gilroy would like to thank SCVURPPP for providing information contained in this brochure.



Last Updated: May 2016

Spill Response Agencies:


1. City of Gilroy, call (408) 846-0350.
2. City of Morgan Hill, call (408) 776-7333.
3. Unincorporated Santa Clara County, call (408) 918-3400
4. In other cities, find the contact number at www.scvurppp-w2k.com/report_spill.shtml or **DIAL 9-1-1**
5. State Office of Emergency Services Warning Center (24 hours). **1-800-852-7550**
6. Santa Clara County's Illegal Dumping/ Discharge Hotline. (408) 918-3400

Local Pollution Control Agencies

- County of Santa Clara Integrated Waste Management Program. (408) 282-3180
- County of Santa Clara District Attorney Environmental Crimes Hotline. . . . (408) 299-TIPS
- Santa Clara County Recycling Hotline. 1-800-533-8414
- Santa Clara Valley Water District. (408) 265-2600
- Santa Clara Valley Water District Pollution Hotline. 1-888-510-5151
- South County Regional Wastewater Facility Serving Gilroy and Morgan Hill. (408) 846-0202

Earth-Moving And Heavy Equipment Operations

*Best Management Practices
(BMPs) for the Construction
Industry*

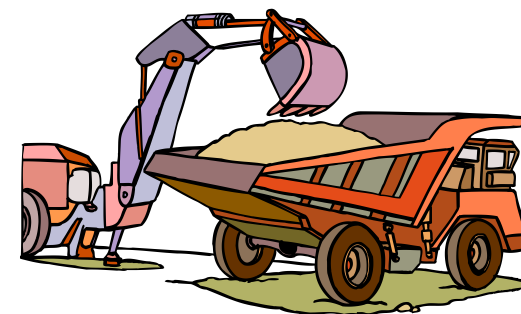

Who should use this brochure?

- Bulldozer, back hoe, and grading machine operators
- Dump truck drivers
- Site supervisors
- General contractors
- Home builders
- Developers